




# Leapfrog LeapPad 3 Display Assembly Replacement

This guide will lead you to a brand new display assembly.

Written By: Matt Irvine

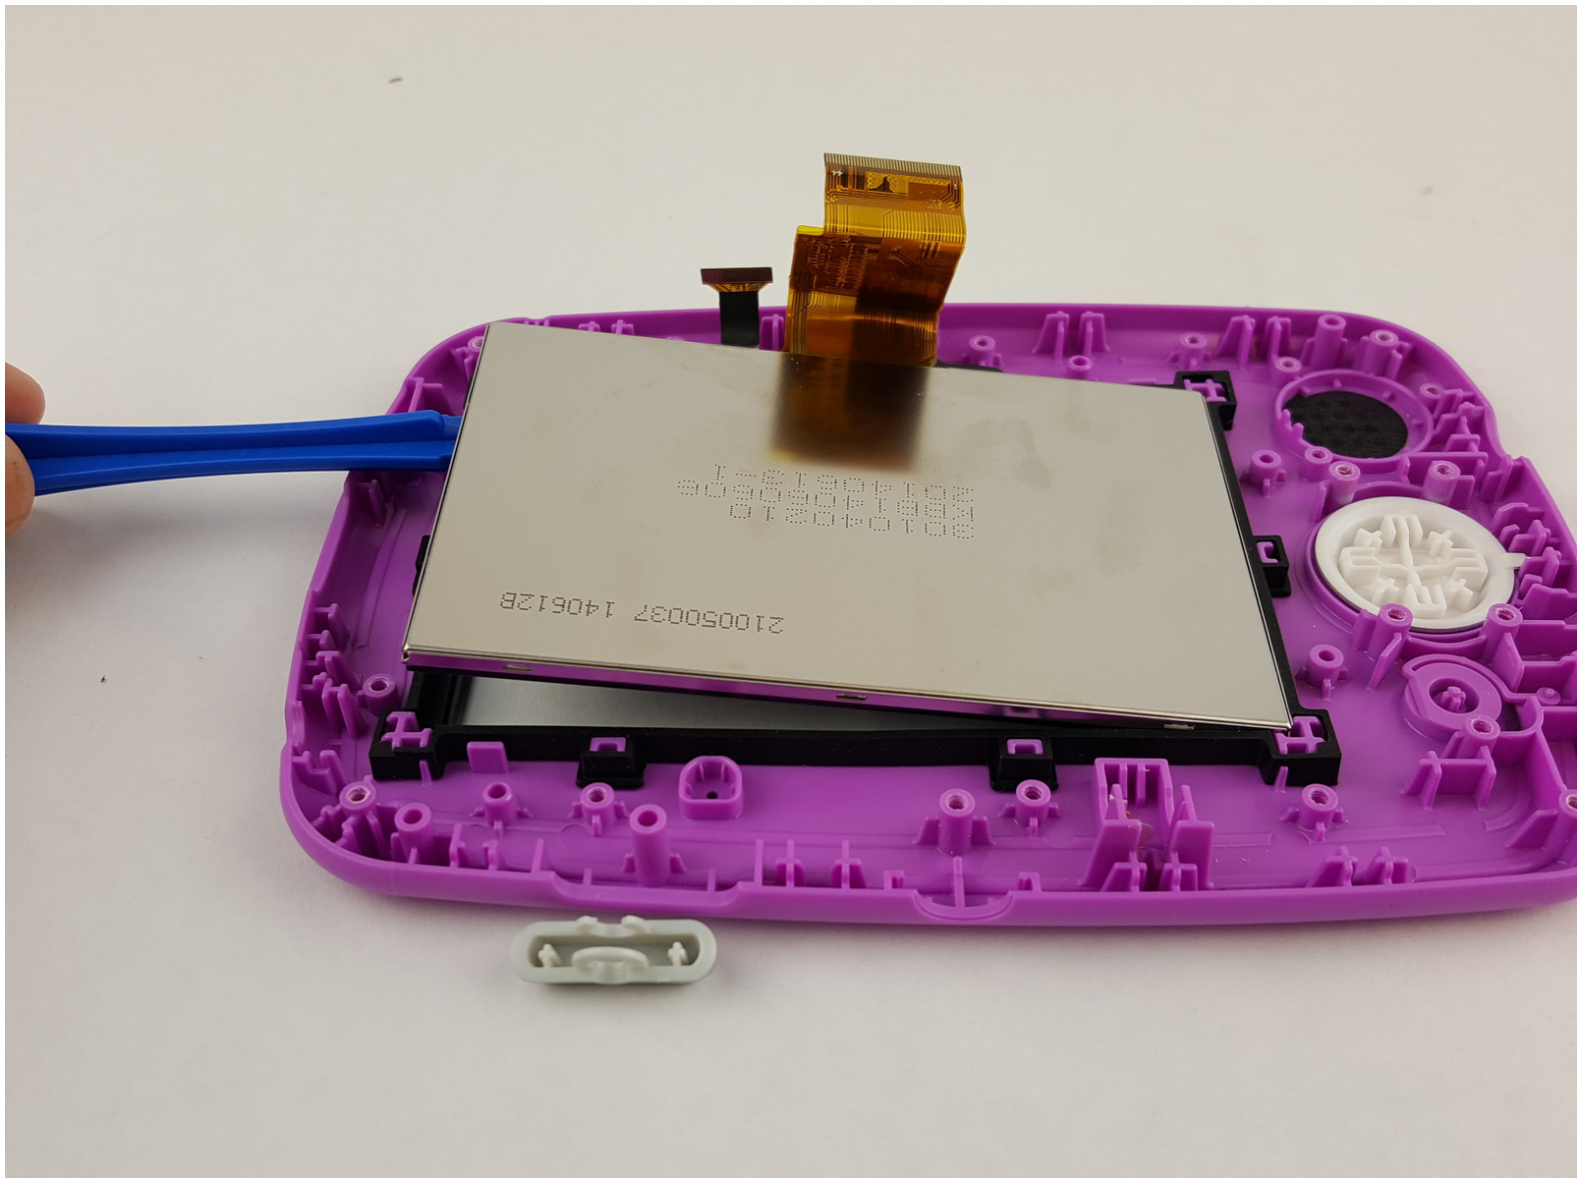

## INTRODUCTION

If your display assembly is scratched or not working properly this is the appropriate guide to get the issue resolved. It is a rather lengthy, however, it is complete and few tools are needed.


---



### TOOLS:



- [Anti-Static Wrist Strap](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery

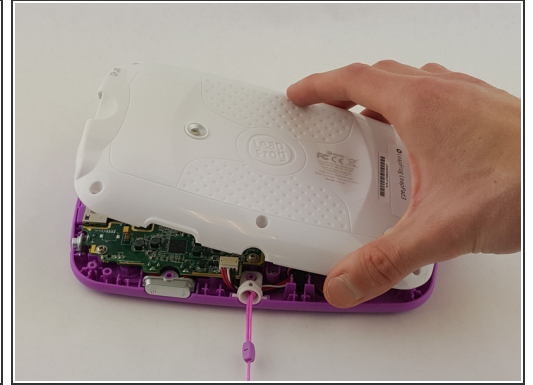

- Before taking apart your device, ensure that it is turned off and that your anti-static wrist strap is secured to a ground.
  - Remove the six 10.0 mm Phillips #0 screws from the outer case and remove the cover with your hands.
- i** You will not need to pry the case off.



## Step 2

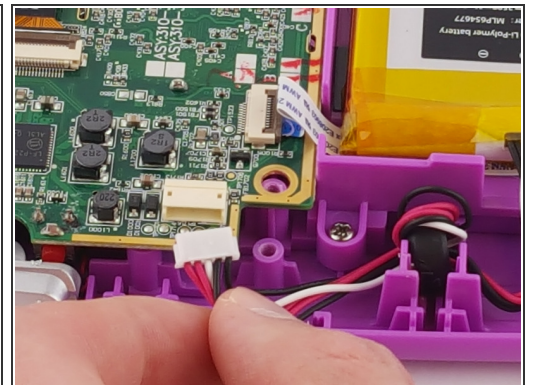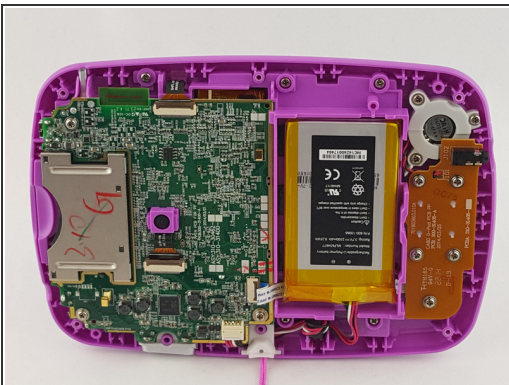

- Unplug the battery from the motherboard with your hands.
- i** The battery sits to the right of the motherboard.




## Step 3

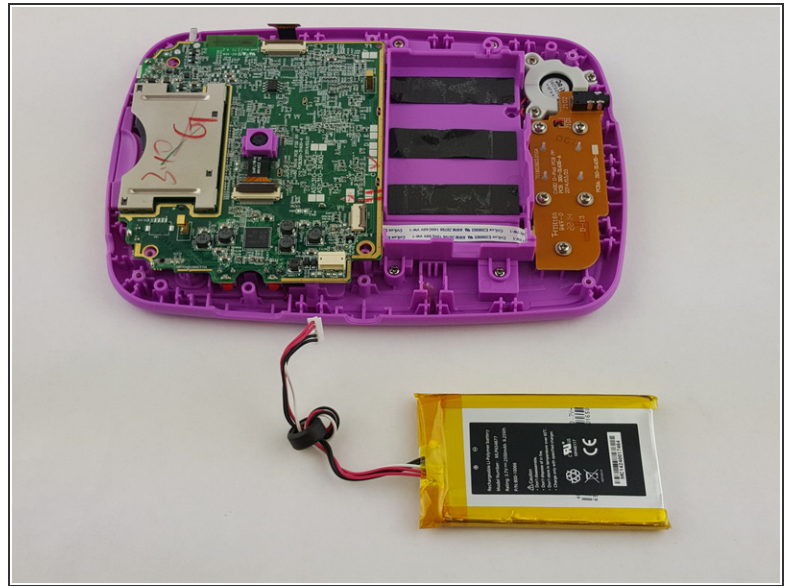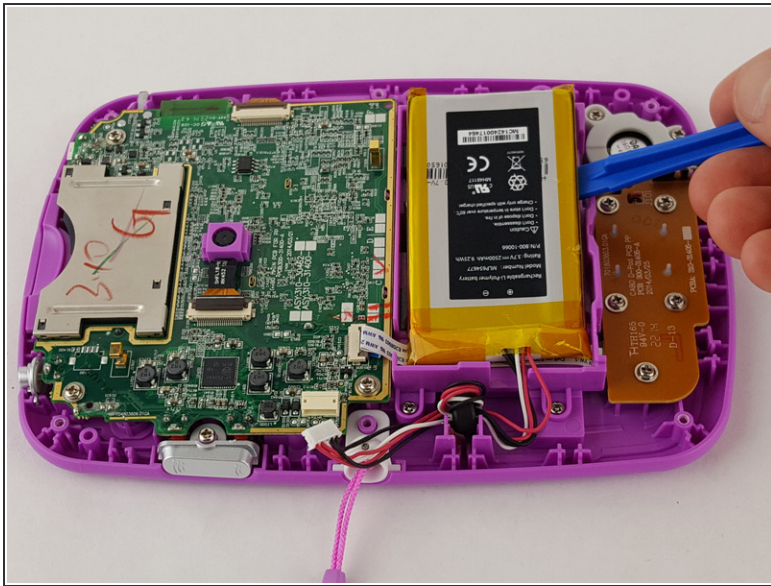


- Pry the battery gently off of the plastic platform with an opening tool.
- ⚠ Do not to puncture the battery, as the material inside can be dangerous.

## Step 4 — Speaker

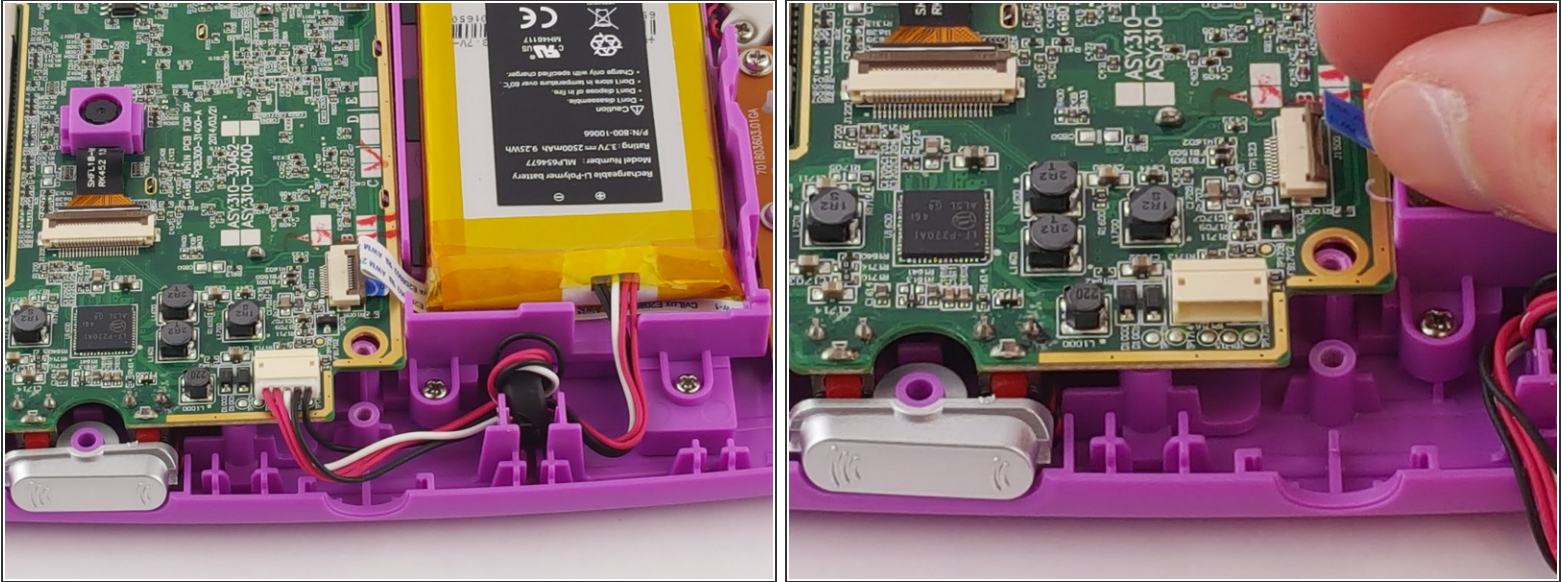

- Disconnect the audio cord from the motherboard using a plastic opening tool.
- ⓘ When re-plugging this cord be sure it is flush with the slot, otherwise the speaker and directional pad will malfunction.
- ⚠ Use caution when unplugging, and re-plugging the ribbon cord as they are fragile.


## Step 5

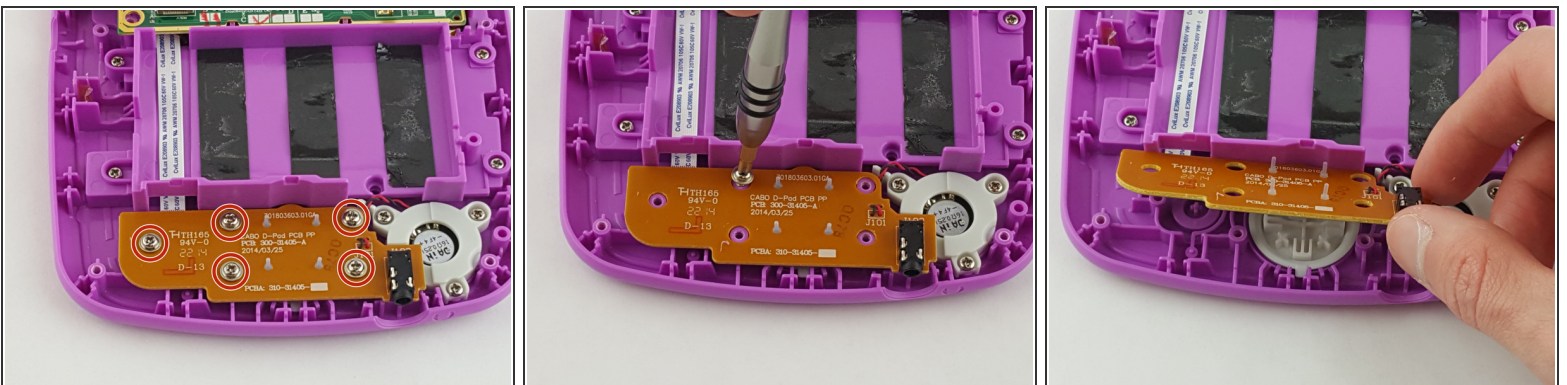

- Unscrew the five 6.0 mm phillips head screws from the board containing the audio jack and directional pad.




## Step 6

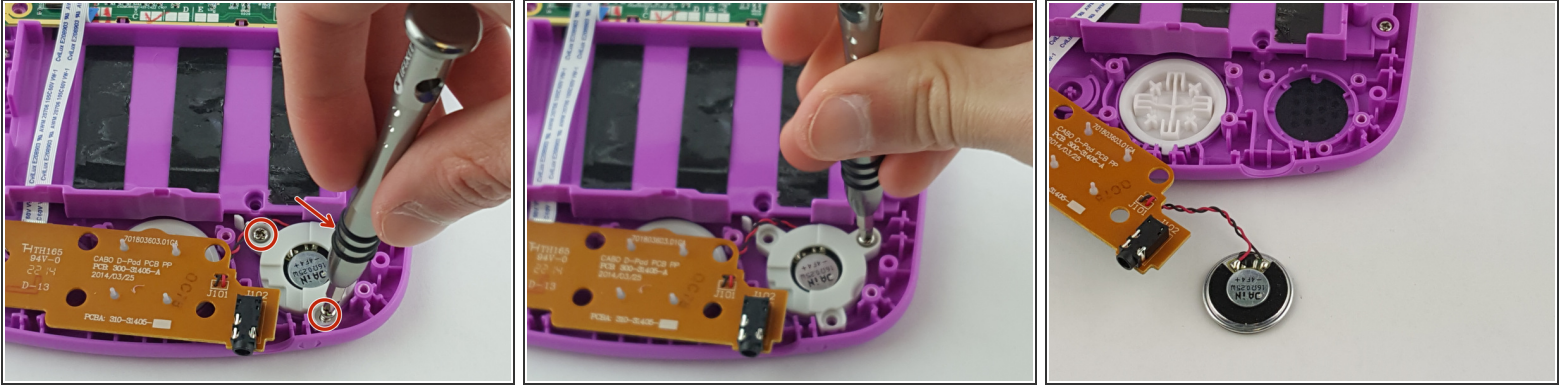

- Unscrew the three 6.5 mm phillips head screws holding down the speaker to the right of the audio jack.
- Remove the board and speaker from the device.

## Step 7 — Motherboard

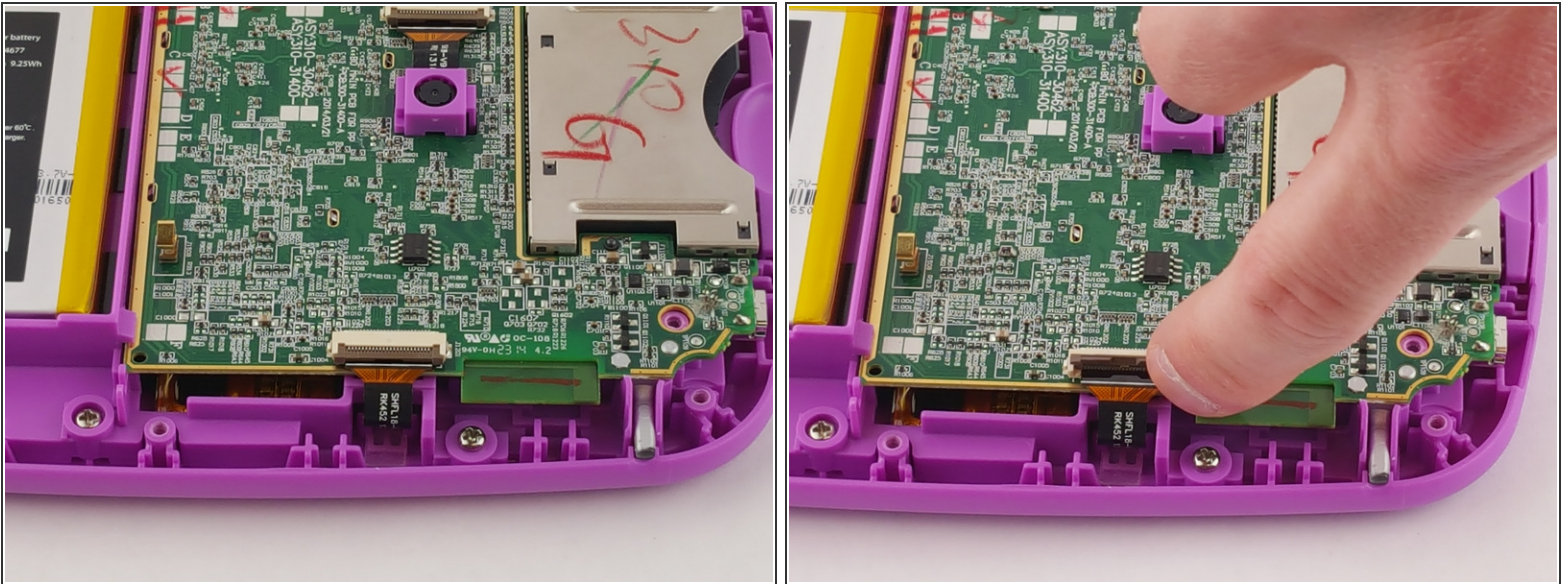




- Unplug the front facing camera cord with an opening tool to free the top of the motherboard.

## Step 8



- Remove the three 6 mm phillips head screws holding the motherboard to the display assembly.



## Step 9

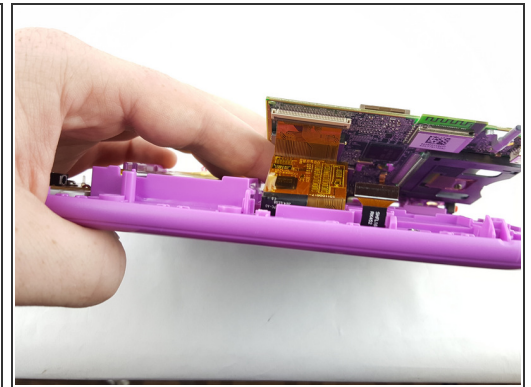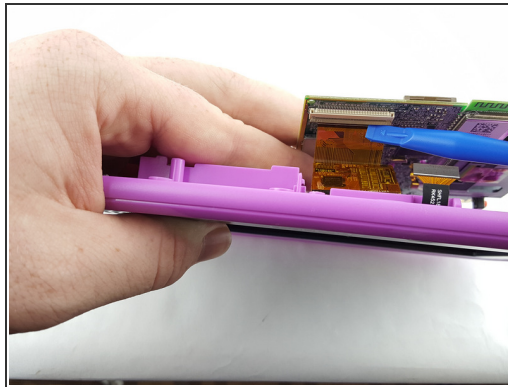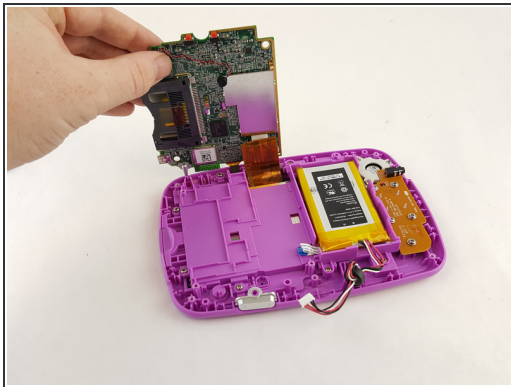

- Carefully lift the motherboard out of the case, exposing the last remaining cord on the underside of the motherboard.
  - Disconnect the gold display assembly cord with an opening tool to fully disconnect the motherboard.
- i** The device was rotated 180 degrees in order to unplug the display assembly cord.






## Step 10 — Display Assembly

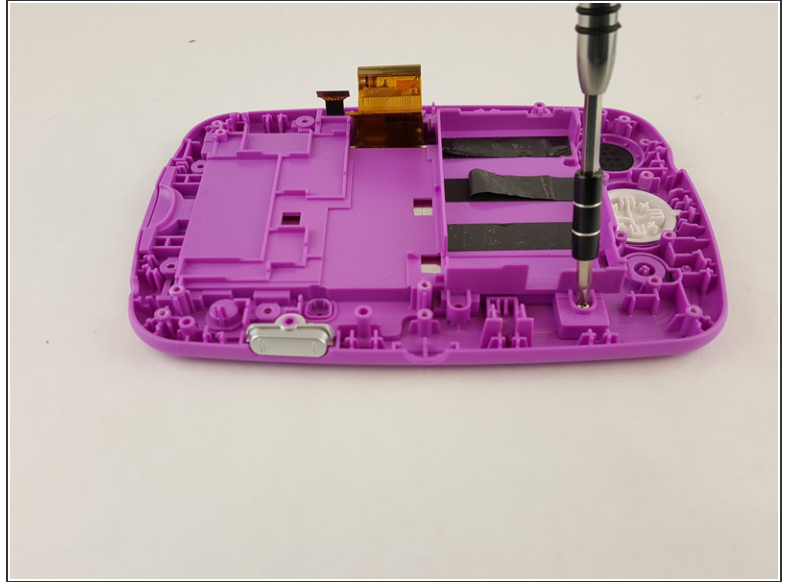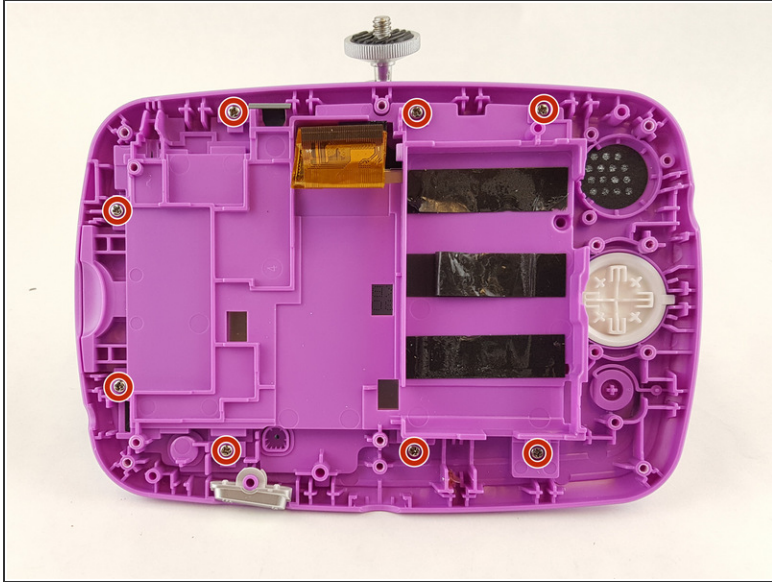

- Unscrew the eight 6.5mm Phillips #0 screws from the plastic casing.


## Step 11

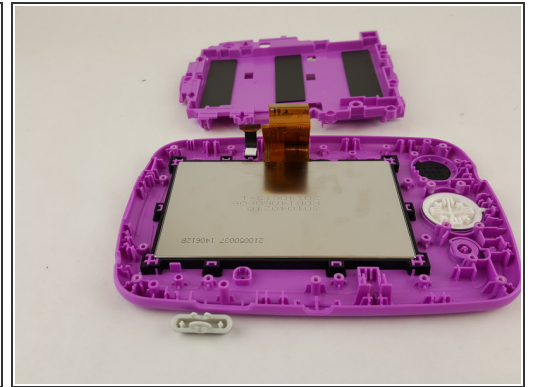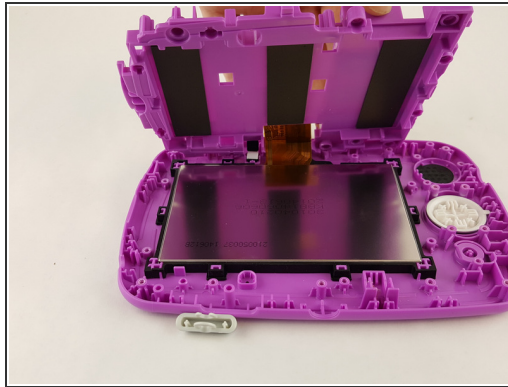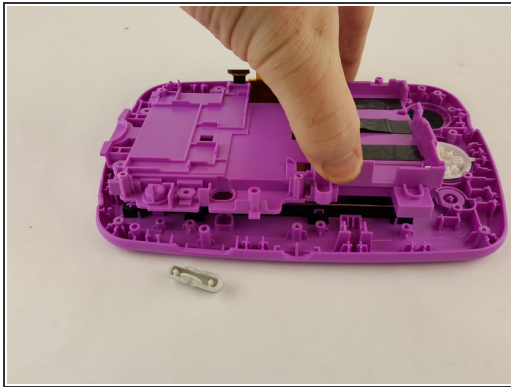

- Remove the covering with your hands to allow full view of the display assembly.



## Step 12

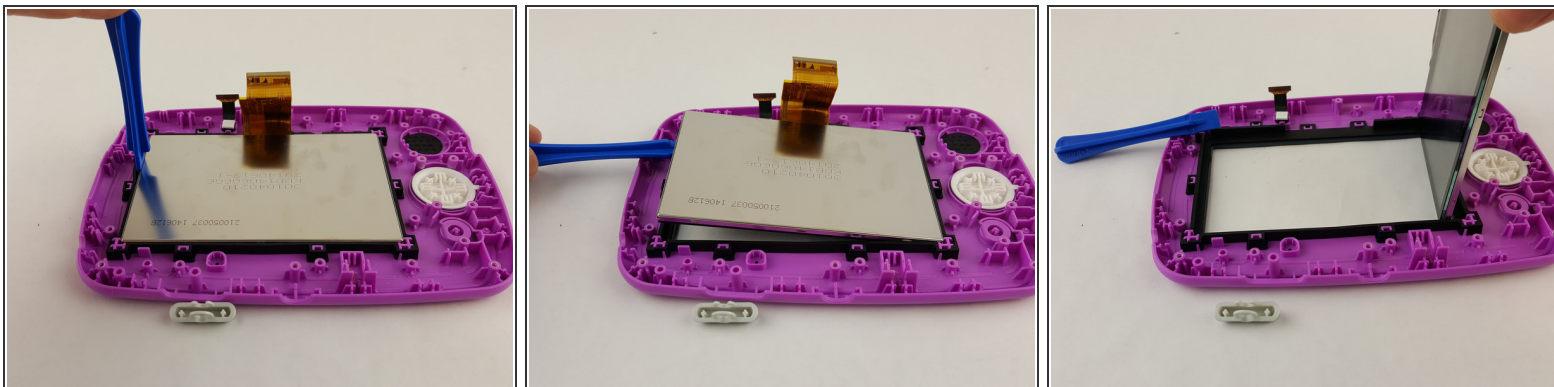

- Remove the display assembly from the black rubber sleeve carefully.
- ⓘ There is a specific orientation for the rubber sleeve so take note of its position.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 09:27:32 AM.